



Firmware update for Z-5152


1. Connect RS232 cable
2. Power on Z-5152 and set to

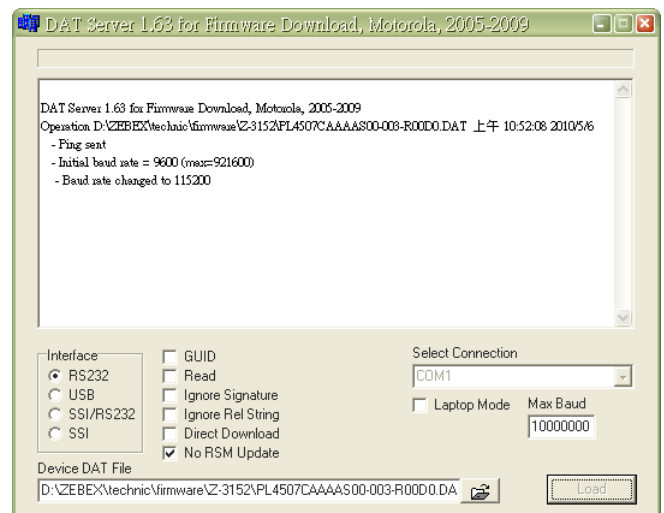

3. Execute DAT_Server.exe
4. Choose the Interface as RS232 , check No RSM Update and select COM port

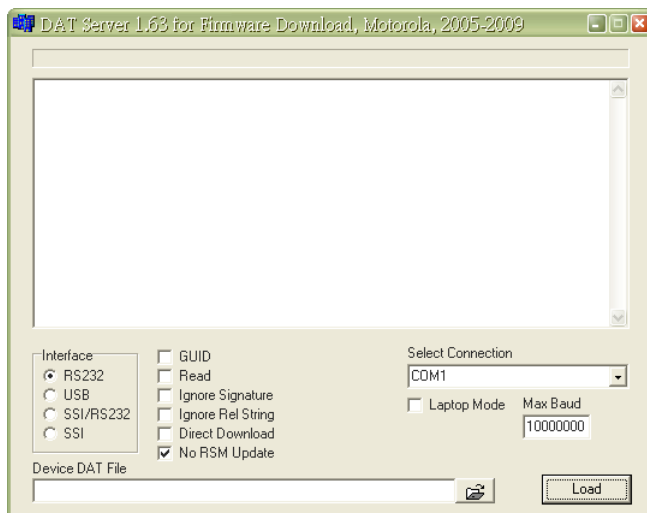

5. Choose the Device DAT file, CAAAAC08-002-R00D0.DAT.
6. Click [Load] and the Z-5152 will start to update.

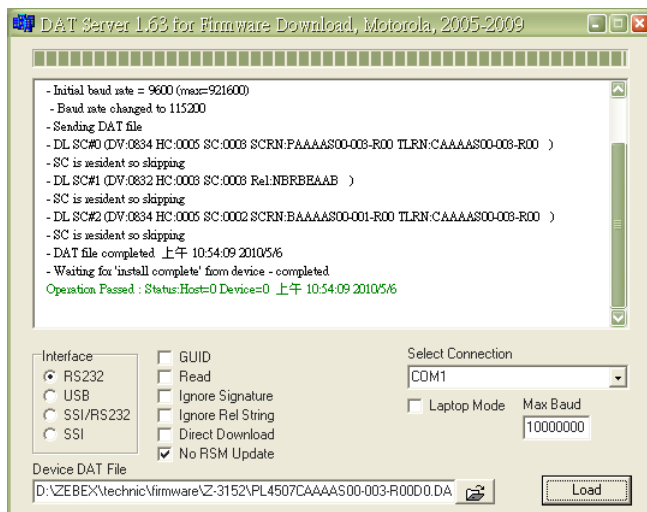

7. The Z-5152 would re-start after finishing updating.
8. Execute SSIApp.exe
9. Choose COM port and 9600 baud rate then choose connect
10. Click [Pull trigger] to emit light
11. Read the attached barcode to set as Presentation Mode